

TRÅDLÖSA, BATTERIFRIA MANÖVERLÅDOR

SW14-080-RFH8


- Ingen kabeldragning
- Inga batterier
- Kapsling i stöttålig ABS



PRODUKTBESKRIVNING

Tack vare att den trådlösa teknologin kan operatören ta med sig tryckknappslådan. Det begränsar risken att någon obehörig ger ett önskat kommando. Eftersom teknologin tillåter konfiguration av mer än en sändare per kanal kan lådan även monteras i tex gaffeltruckar för att göra logistiken snabbare och kan bland annat användas för att öppna portar trådlöst.

Följ artikelnummermatris för att bygga den produkt du behöver.

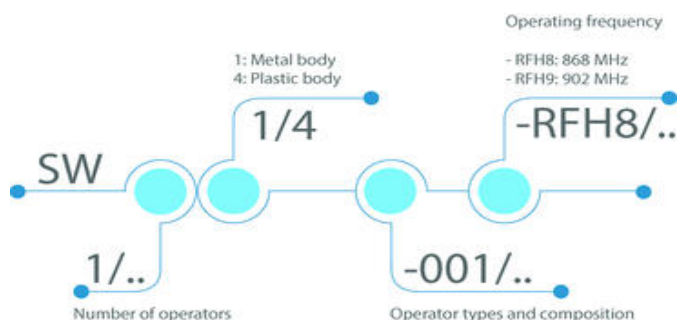

Skapat artikelnummer i matrisen betyder inte att produkten verkligen är tillgänglig. Vänligen kontakta oss för kontroll.

;

TEKNISK DATA

IP-klass	IP66
Material Hus	Plast
Temperaturområde från	-25 °C
Temperaturområde till	70 °C




Installation tips

The wireless signal works at its best when the space is free between the receiver and the transmitter.
Eliminate as far as possible obstacles, mostly if they are metallic!



● COMING

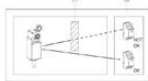

Main features	
Receiver	RRH8 (868MHz) and RRH9 (902MHz)
Transmitter	RRH8 (868MHz) and RRH9 (902MHz)
Power supply	Battery (3x AA)
Range	Up to 100m (open field)
Frequency	868MHz and 902MHz
Buttons	Pushbutton, selector switch, joystick, wobble palm switch
Colors	Yellow, Green, Red, Blue, Pink

RRH8 (868MHz) and RRH9 (902MHz) receivers

Main features

One operator - White ON pushbutton



Code	Description	Frequency
SW11-001-0F10	Chrome plated zamak body	868MHz
SW11-001-0F10	Plastic body	902MHz
SW11-001-0F10	Chrome plated zamak body	902MHz
SW11-001-0F10	Plastic body	902MHz

One operator - Green START pushbutton



Code	Description	Frequency
SW11-002-0F10	Chrome plated zamak body	868MHz
SW11-002-0F10	Plastic body	902MHz
SW11-002-0F10	Chrome plated zamak body	902MHz
SW11-002-0F10	Plastic body	902MHz

One operator - Black 40mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-003-0F10	Chrome plated zamak body	868MHz
SW11-003-0F10	Plastic body	902MHz
SW11-003-0F10	Chrome plated zamak body	902MHz
SW11-003-0F10	Plastic body	902MHz

One operator - Yellow 40mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-004-0F10	Chrome plated zamak body	868MHz
SW11-004-0F10	Plastic body	902MHz
SW11-004-0F10	Chrome plated zamak body	902MHz
SW11-004-0F10	Plastic body	902MHz

One operator - Black 30mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-005-0F10	Chrome plated zamak body	868MHz
SW11-005-0F10	Plastic body	902MHz
SW11-005-0F10	Chrome plated zamak body	902MHz
SW11-005-0F10	Plastic body	902MHz

One operator - Black 60mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-006-0F10	Chrome plated zamak body	868MHz
SW11-006-0F10	Plastic body	902MHz
SW11-006-0F10	Chrome plated zamak body	902MHz
SW11-006-0F10	Plastic body	902MHz

One operator - Two positions selector switch 0-1 maintained



Code	Description	Frequency
SW11-007-0F10	Chrome plated zamak body	868MHz
SW11-007-0F10	Plastic body	902MHz
SW11-007-0F10	Chrome plated zamak body	902MHz
SW11-007-0F10	Plastic body	902MHz

One operator - Two positions selector switch with key 0-1 maintained



Code	Description	Frequency
SW11-008-0F10	Chrome plated zamak body	868MHz
SW11-008-0F10	Plastic body	902MHz
SW11-008-0F10	Chrome plated zamak body	902MHz
SW11-008-0F10	Plastic body	902MHz

One operator - Joystick one positions selector switch with return



Code	Description	Frequency
SW11-009-0F10	Chrome plated zamak body	868MHz
SW11-009-0F10	Plastic body	902MHz
SW11-009-0F10	Chrome plated zamak body	902MHz
SW11-009-0F10	Plastic body	902MHz

One operator - Black extended pushbutton



Code	Description	Frequency
SW11-010-0F10	Chrome plated zamak body	868MHz
SW11-010-0F10	Plastic body	902MHz
SW11-010-0F10	Chrome plated zamak body	902MHz
SW11-010-0F10	Plastic body	902MHz

One operator - Black 90mm wobble palm switch



Code	Description	Frequency
SW11-000-0F10	Plastic body	868MHz
SW11-000-0F10	Plastic body	902MHz

Two operators - UP & DOWN pushbuttons



Code	Description	Frequency
SW21-001-0F10	Chrome plated zamak body	868MHz
SW21-001-0F10	Plastic body	902MHz
SW21-001-0F10	Chrome plated zamak body	902MHz
SW21-001-0F10	Plastic body	902MHz

Two operators - ON & OFF pushbuttons



Code	Description	Frequency
SW21-002-0F10	Chrome plated zamak body	868MHz
SW21-002-0F10	Plastic body	902MHz
SW21-002-0F10	Chrome plated zamak body	902MHz
SW21-002-0F10	Plastic body	902MHz

Two operators - START & STOP pushbuttons



Code	Description	Frequency
SW21-003-0F10	Chrome plated zamak body	868MHz
SW21-003-0F10	Plastic body	902MHz
SW21-003-0F10	Chrome plated zamak body	902MHz
SW21-003-0F10	Plastic body	902MHz