


## GENERAL SERVICE INSTRUCTION CLEANING OF STANDARD A/C UNITS

### 1. Remove unit from cabinet:

#### a. Remove power from unit

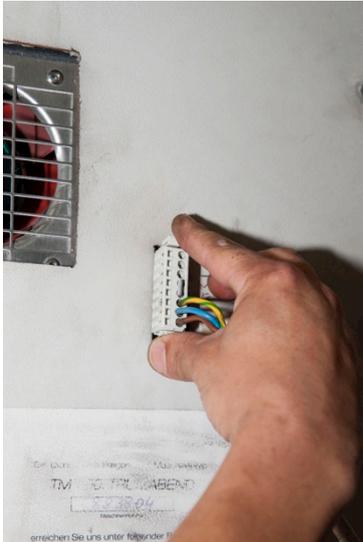

*Danger through incorrect work on the unit.*

Only specialised personnel are allowed to maintain and clean the unit. Regular maintenance and cleaning intervals must be kept to in order to ensure that the unit remains in perfect working condition and has a long working life. The unit must therefore be taken out of operation according to instructions before work commences.



*Danger through incorrect work on the unit.*

The instructions in the cabinet manufacturer's manual must be adhered to.

#### b. Remove all retaining nuts




The seals of the air conditioner and control cabinet interface should be checked for damage and replaced if necessary.

### 2. Clean unit


#### a. Remove unit cover



b. Remove the cover of the controller box

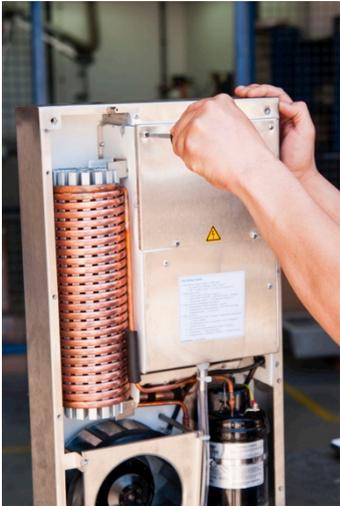

c. Check wiring and controller state

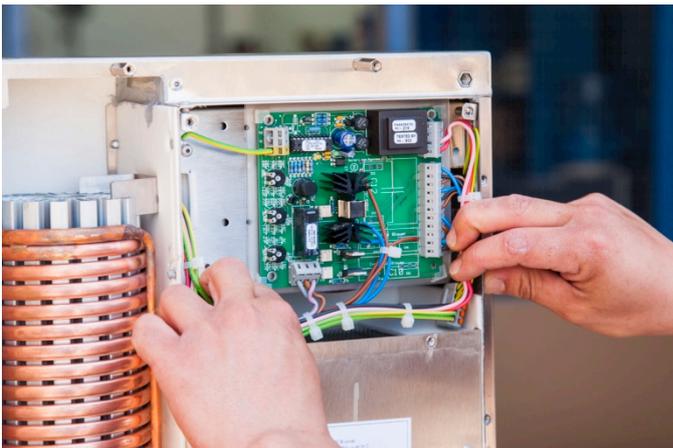


d. Close controller cover and use compressed air to remove dust and dislodge any loose debris



e. Spray cleaning fluid onto a cloth and wipe down unit



f. Replace cover and put unit back onto the cabinet

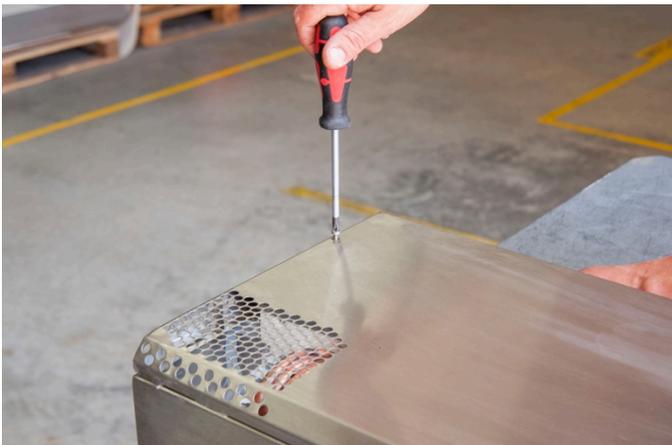

*Important note:*

Before putting the unit back into operation, the unit must stand for a minimum of 30 minutes.